

# Instruction Sets

## Ch 10-11

Characteristics

Operands

Operations

Addressing

Instruction Formats

24.9.2002

Copyright Teemu Kerola 2002

1

## Instruction Set

(käskykanta)

- Collection of instructions that CPU understands
- Only interface to CPU from outside
- CPU executes a program  $\Leftrightarrow$  CPU executes given instructions “one at a time”
  - fetch-execute cycle

Fig. 10.1 (Fig. 9.1 [Stal99])

24.9.2002

Copyright Teemu Kerola 2002

2

## Machine Instruction

- Opcode
  - What should I do? Math? Move? Jump?
- Source operand references
  - Where is the data to work on? Reg? Memory?
- Result operand reference
  - Where should I put the result? Reg? Memory?
- Next instruction reference
  - Where is the next instruction? Default? Jump?

Fig. 10.1 (Fig. 9.1 [Stal99])

24.9.2002

Copyright Teemu Kerola 2002

3

## Instruction Representation

- Bit presentation:
  - binary program
- Assembly language
  - symbolic program
- Symbolic assembly language

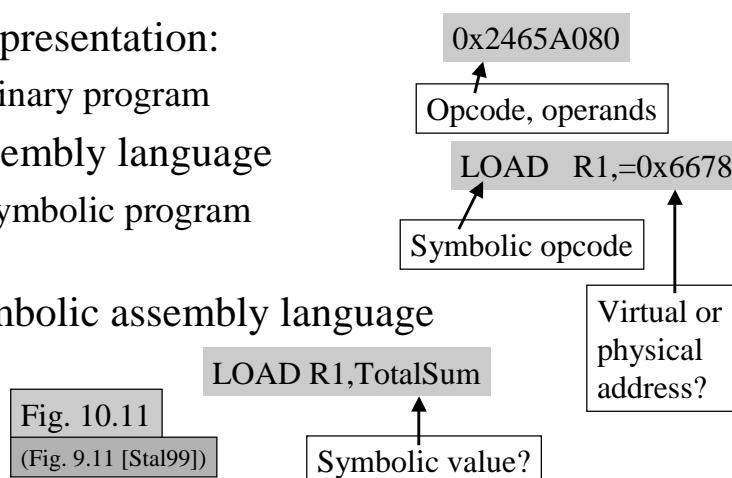


Fig. 10.11

(Fig. 9.11 [Stal99])

24.9.2002

Copyright Teemu Kerola 2002

4

## Instruction Set Design (5)

- Operation types (operaatiotyyppi)
  - How many? What type? Simple? Complex?
- Data types (tietotyyppi)
  - Just a few? Many?
- Instruction format (käskyn muoto)
  - fixed length? Varying length? Nr of operands?
- Number of addressable registers
  - too many  $\Rightarrow$  too long instructions?
  - too few  $\Rightarrow$  too hard to optimise code?
- Addressing (tiedon osoitus)
  - What modes to use to address data and when?

## Good Instruction Set (2)

- Good target for compiler
  - Easy to compile?
  - Possible to compile code that runs fast?
  - Easy to compile code that runs fast?
- Allows fast execution of programs
  - How many meaningless instructions per second? MIPS? GFLOPS?
  - How fast does my program run?
    - Solve linear system of 1000 variables?
    - Set of data base queries?
    - Connect a phone call in reasonable time?

## Good Instruction Set (contd) (5)

- Beautiful & Aesthetic
  - Orthogonal (ortogonaalinen)
    - Simple, no special registers, no special cases, any data type or addressing mode can be used with any instruction
  - Complete (täydellinen)
    - Lots of operations, good for all applications
  - Regular (säännöllinen)
    - Specific instruction field has always same meaning
  - Streamlined (virtaviivainen)
    - Easy to define what resources are used

24.9.2002

Copyright Teemu Kerola 2002

7

## Good Instruction Set (contd) (2)


- Easy to implement
  - 18 months vs. 36 months?
  - Who will be 1<sup>st</sup> in market? Who will get development monies back and who will not?
- Scalability (skaalautuva)
  - Speed up clock speed 10X, does it work?
  - Double address length, does design extend?
    - E.g., 32 bits  $\Rightarrow$  64 bits  $\Rightarrow$  128 bits?


24.9.2002

Copyright Teemu Kerola 2002

8

# Number of Operands? (4)

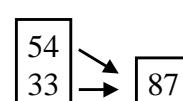- 3? ADD A,B,C Mem(A)  $\leftarrow$  mem(B) + mem(C)
    - Normal case now ADD R1, R2, R3 r1  $\leftarrow$  r2+r3
  - 2?
    - 1 operand and result the same ADD R1, R2 r1  $\leftarrow$  r1+r2
  - 1?
    - 1 operand and result in implicit accumulator (register) ADD A acc  $\leftarrow$  acc+mem(A)
  - 0?
    - All operands and result in implicit stack ADD

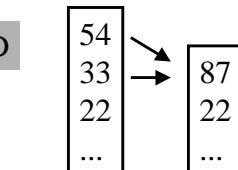


24.9.2002

Copyright Teemu Kerola 2002

9

# Instruction Set Architecture (ISA)

## Basic Classes

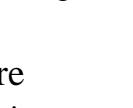- Accumulator architecture
  - Stack architecture
  - General Purpose Register (GPR) architecture
    - only one type of registers, good for all
    - 2 or 3 operands
  - Load/Store architecture
    - only load/store instructions access memory
    - 3 operand ALU instructions

LOAD R3, C

LOAD R2,B

ADD R1,R2,R3

STORE R1,A


24.9.2002

Copyright Teemu Kerola 2002

10

## Big vs. Little Endian <sup>(3)</sup>

- How are multi-byte values stored

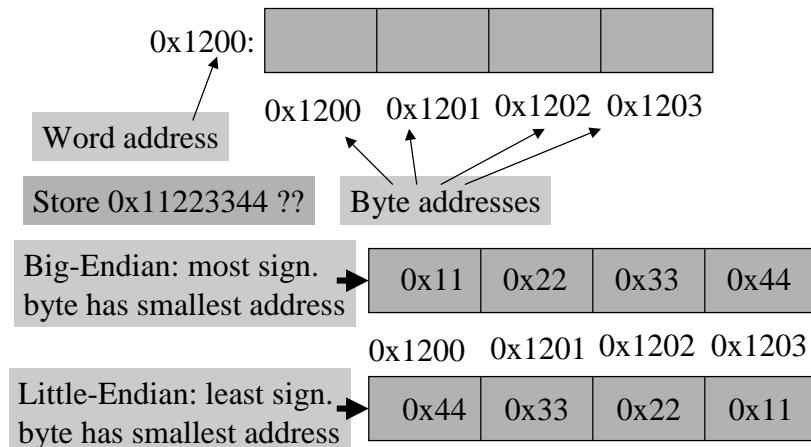

24.9.2002

Copyright Teemu Kerola 2002

11

## Big vs. Little Endian

- Address of multi-byte data items is the same in both representations
- Only internal byte order varies
- Must decide one way or the other
  - Math circuits must know which presentation used
    - Little-Endian may be faster ....
    - Must consider when moving data via network
- Power-PC: bi-endian - both modes at use
  - can change it per process basis
  - kernel mode selected separately


24.9.2002

Copyright Teemu Kerola 2002

12

## Data (Operands, Result) Location

- Register
  - close, fast
  - limited number of them
  - need to load/store values from/to memory sometimes (often)
    - big problem! 50% of compiler time to decide
    - register allocation problem
- Memory
  - far away
  - only possibility for large data sets
    - vectors, arrays, sets, tables, objects, ...

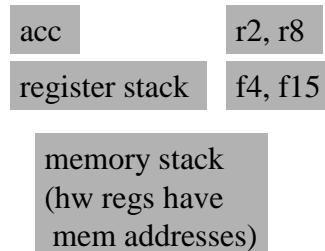

24.9.2002


Copyright Teemu Kerola 2002

13

## Aligned Data (4)

2 byte (16-bit) half-word has byte address:	0010...10010
4 byte (32-bit) word has byte address:	0010...101 <u>00</u>
8 byte (64-bit) doubleword has byte address:	0010...11 <u>000</u>

- Aligned data
  - faster memory access
    - 32-bit data loaded as one memory load
- Non-aligned data
  - saves mem, more bus traffic!
    - 32-bit non-aligned data requires 2 memory loads (each 4 bytes) and combining data into one 32-bit data item

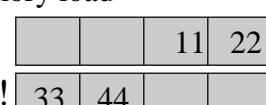

24.9.2002

Copyright Teemu Kerola 2002

14

## Data Types (8)

- Address      16b, 32b, 64b, 128b?
- Integer      16b, 32b, 64b?
- Floating point      32b, 64b, 82b?
- Decimal      18 digits (9 bytes) packed decimal?
- Character      1 byte = 8b IRA = ASCII, EBCDIC?
- String      finite, arbitrary length? Length denotation?
- Logical data      1 bit (Boolean value, bit field)?
- Vector, array, record, ....

24.9.2002

Copyright Teemu Kerola 2002

15

## Size of Operand

- 1 word, 32 bits      int, float, addr
- 2 words, 64 bits      double float, addr
- 4 words, 128 bits      addr
- 1 byte (8 bits)      char
- 2 bytes      short int
- 1 bit      logical values

24.9.2002

Copyright Teemu Kerola 2002

16

## Example: Pentium II Data Types

- General data types
  - 8-bit byte
  - 16-bit word
  - 32-bit doubleword
  - 64-bit quadword
- Not aligned
- Little Endian
- Specific data types
- Numerical data types

Table 10.2

(Tbl. 9.2 [Stal99])

(for Pentium II)

Figure 10.4

(Fig. 9.4 [Stal99])

## Operation Types

- Data transfer
  - CPU ↔ memory
- ALU operations
  - INT, FLOAT, BOOLEAN, SHIFT, CONVERSION
- I/O
  - read from device, start I/O operation
- Transfer of control
  - jump, branch, call, return, IRET, NOP
- System control
  - HALT, SYSENTER, SYSEXIT, ...
  - CPUID returns current HW configuration
    - size of L1 & L2 caches, etc

Table 10.3

(Tbl 9.3 [Stal99])

Table 10.4

(Tbl 9.4 [Stal99])

## Data References <sup>(2)</sup>

- Where is data?
  - in memory
  - in registers
  - in instruction itself
- How to refer to data?
  - various addressing modes
  - multi-phase data access
    - how is data location determined (addressing mode)
    - compute data address (register? effective address?)
    - access data

## Addressing Modes (Ch 10)

Fig. 11.1

(Fig 10.1 [Stal99])

Table. 11.1

(Tbl 10.1 [Stal99])


- Immediate Data in instruction
- Direct Memory address of data in instruction
- Indirect Address of memory address of data in instruction (pointer)
- Register Data in register (best case?)
- Register Indirect Register has memory address (pointer)
- Displacement Addr = reg value + constant
- Stack Data in stack pointed by some register

24.9.2002

Copyright Teemu Kerola 2002

21

## Displacement Address

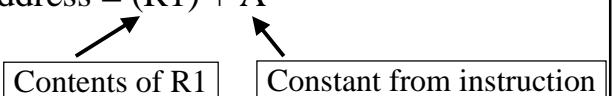- Effective address =  $(R1) + A$ 


Contents of R1      Constant from instruction
- Constant is often small (8 bits, 16 bits?)
- Many uses
  - PC relative JUMP -40(PC)
  - Base register address CALL Summation(BX)
  - Array index ADDF F2, F2, Table(R5)
  - Record field MUL F4, F6, Salary(R8)
  - Stack references STORE F2, -4(FP)

24.9.2002

Copyright Teemu Kerola 2002

22

## More Addressing Modes

- Autoincrement

$$EA = (R), R \leftarrow (R) + S$$

E.g., CurrIndex = i++;

- Autodecrement

$$R \leftarrow (R) - S, EA = (R)$$

E.g., CurrIndex = --i;

- Autoincrement deferred

$$EA = \text{Mem}(R), R \leftarrow (R) + S$$

E.g., Sum = Sum + (\*ptrX++);

- Scaled

$$EA = A + (R_j) + (R_i) * S$$

E.g., double X;  
X = Tbl[i][j];

24.9.2002

Copyright Teemu Kerola 2002

23

## Pentium II Addressing Modes

- Immediate

– 1, 2, 4 bytes

- Register operand

– 1, 2, 4, 8 byte registers

– not all registers with every instruction

- Operands in Memory

Fig. 11.2 (Fig 10.2 [Stal99])

– compute effective address and combine with segment register to get linear address (virtual address)

Table 11.2 (Tbl 10.2 [Stal99])

24.9.2002

Copyright Teemu Kerola 2002

24

## Instruction Format (4)

- How to represent instructions in memory?
- How long instruction
  - Descriptive or dense? Code size?
- Fast to load?
  - In many parts?
  - One operand description at a time?
- Fast to parse (I.e., split into logical components)?
  - All instruction same size & same format?
  - Very few formats?

24.9.2002

Copyright Teemu Kerola 2002

25

## Instruction Format (contd) (3)

- How many addressing modes?
  - Fewer is better, but harder to compile to
- How many operands?
  - 3 gives you more flexibility, but takes more space
- How many registers?
  - 16 regs → need 4 bits to name it
  - 256 regs → need 8 bits to name it
  - need at least 16-32 for easy register allocation
  - How many registers, that can be referenced in one instruction vs. referenced overall?

24.9.2002

Copyright Teemu Kerola 2002

26

## Instruction Format (contd) <sup>(3)</sup>

- How many register sets?
  - A way to use more registers without forcing long instructions for naming them
  - One register set for each subroutine call?
  - One for indexing, one for data?
- Address range, number of bits in displacement
  - more is better, but it takes space
- Address granularity
  - byte is better, but word address is shorter

24.9.2002

Copyright Teemu Kerola 2002

27

## Pentium Instruction Set <sup>(5)</sup>

- CISC - Complex Instruction Set Computer
- At most one memory address
- “Everything” is optional
- “Nothing” is fixed
- Difficult to parse
  - all latter fields and their interpretation depend on earlier fields

Fig. 11.8 (Fig 10.8 [Stal99])

24.9.2002

Copyright Teemu Kerola 2002

28

## Pentium Instruction Prefix Bytes <sup>(4)</sup>

Fig. 11.8

(Fig 10.8 (a)[Stal99])

- Instruction prefix (optional)
  - LOCK - exclusive use of shared memory
  - REP - repeat instruction for string characters
- Segment override (optional)
  - override default segment register
  - default is implicit, no need to store it every instruction
- Address size (optional)
  - use the other (16 or 32 bit) address size
- Operand size (optional)
  - use the other (16 or 32 bit) operand size

24.9.2002

Copyright Teemu Kerola 2002

29

## Pentium Instruction Fields <sup>(3)</sup>

Fig. 11.8

(Fig 10.8 (a)[Stal99])

- Opcode
  - specific bit for byte size data
- Mod r/m (optional)
  - data in reg (8) or in mem?
  - which addressing mode of 24?
  - can also specify opcode further for some opcodes
- SIB (optional) – Scale/Index/Base
  - extra field needed for some addressing modes
  - scale for scaled indexing
  - index register
  - base register

24.9.2002

Copyright Teemu Kerola 2002

30

## Pentium Instruction Fields (contd) <sup>(2)</sup>

- Displacement (optional)
  - for certain addressing modes
  - 1, 2, or 4 bytes
- Immediate (optional)
  - for certain addressing modes
  - 1, 2, or 4 bytes

Fig. 11.8

(Fig 10.8 (a)[Stal99])

24.9.2002

Copyright Teemu Kerola 2002

31

## PowerPC Instruction Format <sup>(7)</sup>

- RISC - Reduced Instruction Set Computer
- Fixed length, just a few formats
- Only 2 addressing modes for data
- Only load/store instructions access memory
- 32 general purpose registers can be used everywhere
- Fixed data size
  - no string ops
- Simple branches
  - CR-field determines which compare result to use
  - L-bit determines whether a subroutine call
  - A-bit determines if branch is absolute or PC-relative

Fig. 11.9

(Fig 10.9 [Stal99])

24.9.2002

Copyright Teemu Kerola 2002

32

-- End of Chapters 10-11: Instruction Sets --

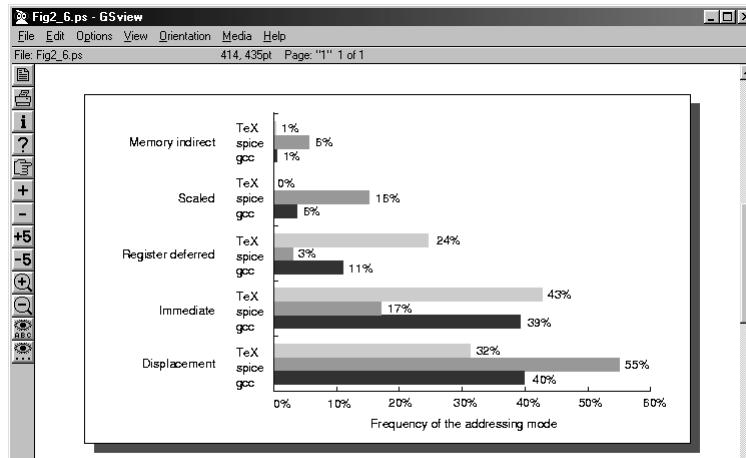


FIGURE 2.6 Summary of use of memory addressing modes (including immediates).

(Hennnassy-Patterson, Computer Architecture, 2nd Ed, 1996)